



COMPANY WITH
QUALITY SYSTEM
CERTIFIED BY DNV GL
= ISO 9001:2015 =



USER'S MANUAL AND MAINTENANCE
POSITIONING UNIT
SERVO.3M PROFINET/ETHERNET

Manual purpose

This manual has been designed by the manufacturer to provide the necessary information regarding the unit SERVO to those who are authorized to carry out safely its installation, maintenance, dismantling and disposal. All the necessary information for the buyers and planners can be found in the Sales catalogue. Other than adopting good technical construction methods, the information should be read carefully and strictly applied. Inobservance of this information could cause risks for the health and safety of people and economical damage. This information, provided by the manufacturer in the original language (Italian) is also available in other languages to satisfy legislative and/or commercial needs. A responsible person in an ideal place must keep this manual in good conditions so that it is always available for consultation. In case this manual is lost or deteriorates, a replacement should be requested directly from the manufacturer quoting the manual's code. This manual reflects the state of skill of the instrument at the time of input on the market: however the manufacturer reserves the right to make changes, add or improve the manual without giving any reason to hold the present manual inadequate.

Identification of the equipment

The identification plate represented is applied on the instrument.

To find out the identification code of the instrument, consult the sales catalogue.

Environmental conditions

Temperature setting: min. 0°C, max. + 50°C.

It is forbidden to use the instrument other than its specific use and in potentially explosive conditions or where anti- explosive elements are used.

Storage

Here below are some references to be followed for the storage of the device.

Avoid environments with excessive humidity and those exposed to bad weather (avoid open areas). Avoid putting the instrument directly on the ground. Store the instrument in its original packing.

Conformity declaration and EC marking

The instrument answers to the following Communitarian Directives:

2014/30/EU Electromagnetic compatibility, 2011/65/EU RoHS

Maintenance

The instrument does not need a particular maintenance except cleaning to do only with a soft cloth dampen with ethylic alcohol or water. Do not use hydrocarbon solvents (petrol, diluents, etc.): the using of these products could affect the proper functioning of the instrument.

Reparations should be done only and exclusively at the FIAMA technical assistance centre.

Assistance request procedure

For any kind of technical assistance request, contact the sales department of the Manufacturer directly indicating the information given on the identification plate, the number of hours used and the type of defect.

Manufacturer's responsibility

The manufacturer declines any responsibility in case of:

- Using the instrument contrary to the national safety and accident-prevention laws.
- Wrong installation, inobservance or wrong procedures of the instructions provided in the present manual.
- Defective electrical power supply.
- Modifications or tampering.
- Operations carried out by untrained or unqualified staff.

The safety of the instrument also depends on the strict observance of the procedures indicated in the manual: always operate the instrument in its functioning capacity and carry out a careful routine maintenance.

- All phases of inspection and maintenance should be done by qualified staff.
- The configurations provided in the manual are the only ones permitted.
- Do not try to use it anyway contrary to the indications provided.
- The instructions in this manual do not substitute but accomplish the obligations of the current legislation regarding the safety laws.


Description

The positioning unit SERVO.M is made of a geared motor in direct current with microprocessor control of the driving gear and of an incremental position transducer (encoder) or absolute (precision potentiometer) assembled on the output shaft with interface for field bus and display with 5 digits. It realises in a single and compact device a complete system for the control of axis being able to receive by bus a dimension to reach and start with the positioning by a control type PID. The version **SERVO.M-E** has a position transducer with an incremental optic encoder, while the version **SERVO.M-P** has a precision potentiometer.

The SERVO.M unit has a hollow shaft output to enable a simple assembling and a versatile use, even with pre-existent manual motion machines that have to be automated. Therefore it is suitable for a large number of applications in machinery within industries such as printing, packaging, woodworking, marble, plastic, etc. A simple linking and lay out are guaranteed by a supervisor (PC, PLC), the system interfaces with a bus-field to control the positioning and enable the modifications of the control parameters (present quota, speed, state).

The communication record can be MODBUS RTU, CANopen, PROFIBUS DP.

For the electric connection there are separate ways for the power-supply and communications cables: the SERVO.2M has 2 press-cables PG9 for the input and output of the connections, the SERVO.3M has 3 press-cables for the input and output (2 PG9, 1 PG7).

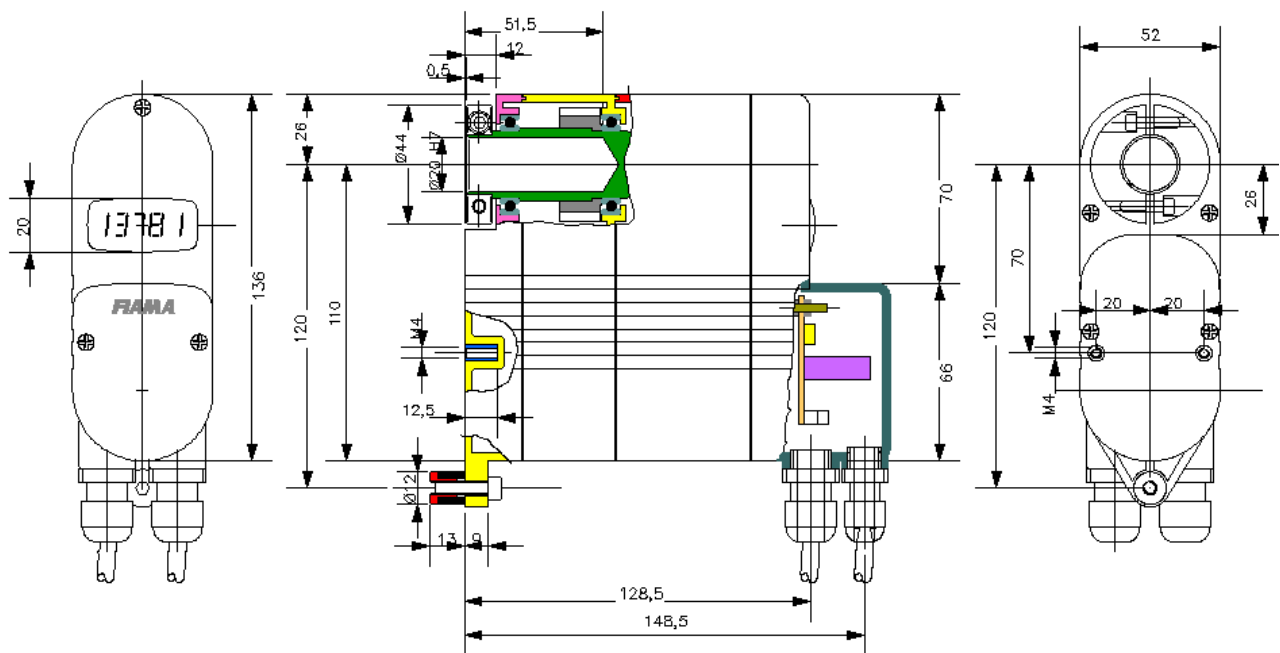

Installation

Before installing the instrument, read the following warnings:

- a) Connect the instrument strictly following the instructions of the manual.
- b) Carry out the connections using the correct wires within the limits of the tension and power supply as indicated in the technical data.
- c) The instrument does not have an ON/OFF switch, hence it comes on when connected to the power supply. For safety reasons, the equipment connected permanently to the power supply requires a bi-phase selector switch which should be within easy reach of the operator.
- d) If the instrument is connected to any apparatus not isolated electrically, carry out an earth connection to avoid it being connected directly through the structure of the machine.
- e) It is the responsibility of the user to check, before using, the correct settings of the parameters of the instrument to avoid damage to persons or things.
- f) The instrument cannot function in a dangerous environment (inflammable or explosive). It can be connected to elements that operate in the same atmosphere only through appropriate interfaces, according to the current safety regulations.
- g) Avoid dust, humidity, corrosive gases, heat sources.

Power supply

- a) Before connecting the unit, check that the power supply tension is within the permitted limits and that it corresponds to the one indicated on the tag.
- b) Carry out the electrical connections with the instrument disconnected.
- c) For the power line to instruments and sensors, a power supply line separate from that of the power is required : it is necessary to use an isolating transformer.
- d) The power line should provide a device that separates the set fuses of the instruments and should not be used to regulate relays, contactors, etc.
- e) If the network tension is very disordered (ex. from the change-over of the power units, motors, inverters, welders, etc.), use the appropriate filters of the network.
- f) If an earth connection is needed, ensure that the plant has a good earth system: tension between neutral and earth <1V and the resistance <6 Ohm.

Gear motor assembly:

To assemble the unit correctly adhere to the following instructions:

Two M4 screws can be used moreover, that can be screwed in the two brass inserts M4x12 : this is in case the servo motor has to make many manoeuvres or is used continuously.

The unit is therefore inserted through the hollow shaft of diameter Ø20 millimetre (50mm deep) on the driving shaft of the machine.

Ensure that the hollow shaft is perpendicular to the support base.

Block the hollow shaft on the machine shaft using the bolt screw M4 on the clamping metal ring.

N.B. = The gear motor does not have parts that need maintenance or oiling.



If necessary, protect the unit from: dust, water, collisions, extreme temperatures.
 Manually turn the shaft of the reducer using the clamping ring (tightened on the hollow shaft) only if necessary.
 Do not exceed permitted torque.
 Do not dismantle or open the unit, particularly the part of the reducer.
 Do not pierce/modify the container or the hollow shaft.

POTENTIOMETRIC VERSION Before assembling the SERVO, it is fundamental to place the shaft of the machine and the shaft of the SERVO in the correct position, for example half way or towards the end, in a way that there is correlation between the position of the SERVO and that of the machine. To do that, the motion of the hollow shaft of the SERVO should be serially commanded by the control unit (PLC, PC, etc): do not rotate the shaft by hand.

The calculation of the number of turns that the hollow shaft has to finish to develop the total motion of the machine is determined by multiplying the reduction ratio of the reducer of the potentiometer by the number of turns of the potentiometer itself (total reduction ratio = R).

In case that the maximum number of allowed rotations by the shaft is exceeded, a mechanical friction intervenes to safeguard the potentiometer transducer.

NB: the SERVO is provided with the hollow shaft and the potentiometer positioned half way.

ELECTRICAL CONNECTION



Disconnect from power supply before connecting/disconnecting the equipment/machinery.
 The connecting cables must be kept separate from the power lines or from electromagnetic interference sources.
 Pay careful attention to the electrical connections: any failure caused by a faulty connection will render the guarantee null and void.
 The power supply must be in the permitted range, a higher range could damage the equipment.

Remove the 3 closing screws of the cover to access the terminal box.


Slide the cables in the cables press and carry out the connections according to the following:

POWER SUPPLY TERMINAL BOARD

TERMINAL	CONNECTION
+24V LOGIC	+24V power for Profinet/Ethernet logic
+24V POWER	+24VDC power for motor (without this the motor will not rotate)
GND	Power supply GND

POWER CONNECTOR


M12-T male as viewed externally with exit shaft directed downwards

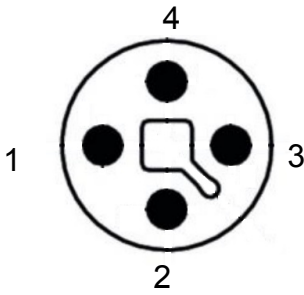

PIN	COLOR	TERMINAL	CONNECTION
1	BROWN	+24V POWER	+24VDC power for motor (without this the motor will not rotate)
2	WHITE	+24V LOGIC	+24V power for Profinet/Ethernet logic
3	BLUE	GND	Power supply GND
4	BLACK	-	NOT CONNECTED

ETHERNET CONNECTORS

M12 4 pin female d coded (front view)

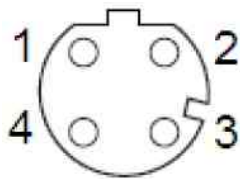

PIN	DESCRIPTION
1	TX DATA +
2	RX DATA +
3	TX DATA -
4	RX DATA -
CASE	SHIELD

STATUS LEDs

LED P1-Net	Condition
Off	No fault – No power supply
Green	Online (RUN mode)
Green blinking	Online (STOP mode)

LED P2-Net	Condition
Off	No fault – No power supply
Red	Fatal error
Red blinking 1x	Name error or name not set
Red blinking 2x	IP error

LED P1-MOD	Condition
Off	No fault – No power supply
Green	Normal operation

LED P2-MOD	Condition
Off	No fault – No power supply
Red	Fatal error

LED P1-Link	Condition
Off	No connection – No power supply
Green	Connection established – PORT 0 (no activity)
Green blinking	Connection established – PORT 0 (active)

LED P1-10Mb	Condition
Off	No fault – No power supply
Green	10Mb connection established – PORT 0

LED P2-Link	Condition
Off	No connection – No power supply
Green	Connection established – PORT 1 (no activity)
Green blinking	Connection established – PORT 1 (active)

LED P2-10Mb	Condition
Off	No fault – No power supply
Green	10Mb connection established – PORT 1

PORT 0: right connector (seen from connectors)

PORT 1: left connector (seen from connectors)

Technical characteristics

Motor	magnetic permanent dc power, 70W (150W max)
Power supply	24Vdc \pm 20%, 2,5A (6,5A max)
Hollow shaft	\varnothing 20mm H7, depth 50mm
Gear motor reduction ratio	50/1 max 115RPM (8Nm @ 70RPM non continuous) 75/1 max 75RPM (12Nm @ 45RPM non continuous)
Resolution	1000 pulse/turn
Potentiometer (SERVO P)	Precision potentiometer transducer
Resolution	16000 points
Number of turns/ linearity	340°/1% - 3 turns /0,25% - 5 turns /0,25% - 10 turns /0,15%
Potentiometer reducer reductions	1/1; 3,3/1; 10/1; 24/1; 30/1; 90/1, others on request
Electrical connection	4 poles terminal board supply, 4 poles terminal board field-bus, max 1,5mm ² , or M12 connectorboard field-bus,
Cable out SERVO.3M	1 cable gland PG7 for supply (cable \varnothing 3 - 6mm) 2 cable glands PG9 for field-bus (cable \varnothing 5 - 8mm)
Weight	1100g
Protection level	IP54
Working temperature	0-60°C
Temperature	10-85%
Directive: 2014/30/EU Electromagnetic compatibility, 2011/65/EU RoHS	

Manufacturer

All communications to the manufacturer should be addressed to:

FIAMA s.r.l., Via G. Di Vittorio, 5/A - 43016 San Pancrazio (Parma) - Italy

Tel. (+39) 0521.672.341 - Fax. (+39) 0521.672.537 – e-mail: info@fiama.it - www.fiama.it

FIAMA srl is not responsible for any damage to persons or things caused by tampering and wrong use and in any case that are not consistent with the features of the instrument.